


B104

STRAIGHT EDGES	4
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	8

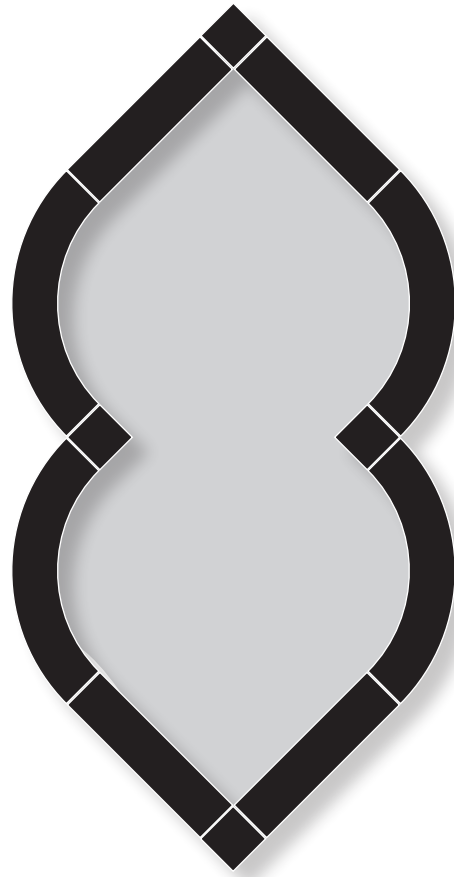

A335

STRAIGHT EDGES	4
CURVED EDGES	4
90° ANGLE	4
CONNECTORS	0

PERFECT EDGE

Instructional Manual

PERFECT EDGE could not be easier to use.

It is highly recommended that the lawn be cut prior to using PERFECT EDGE.

First choose a design from within the catalogue, for example design 'A203' shown below. This design will require the turf on the inside of the design to be removed to create a bed or around an existing feature such as shrubs, plants or trees.

To create this very simple design firstly lay out the two curved edges (marked with the number 6) and the four straight edges, along with the two 90 degree angles, the four standard connectors required and 12 fixing pins. Join the pieces together by attaching the 90 degree angles to the straight edges. Now simply attach the two curved edges to the straight edges by way of the standard connectors and the design is complete.

When you have approved the design and its position insert the fixing pins through the holes provided and into the turf. The design is now firmly held in place.

Now proceed to cut the turf with the PERFECT EDGE cutting tool. Place the blade against the **INSIDE EDGE ONLY** and cut into the turf by way of hand pressure or by foot pressure if required. The depth of cut is determined by the stop on the footplate of the cutting tool as it is brought to rest on top of the edge. When you have cut all the way around the design **DO NOT** remove the sections of Perfect Edge. Only do this when all of your cutting and final refinements are complete. If necessary repeat the cuts to ensure a clean cut.

N.B. The PERFECT EDGE cutting tool is specially designed to work in association with the design edges particularly within the inside of the curved sections. This is what creates the desired finish. Using a traditional edging iron is not recommended.

To remove the turf in the centre simply use the PERFECT EDGE cutting tool to cut lines across the remaining turf and remove with a spade. This will ensure a consistent depth to the bed. Make any last minute alterations or additions such as compost, bark or stones and then remove the sections of PERFECT EDGE, starting with the fixing pins.

Lay back and enjoy your new design!

A203

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	4




A249

STRAIGHT EDGES	0
CURVED EDGES	4
90° ANGLE	4
CONNECTORS	0




A258

STRAIGHT EDGES	2
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	2

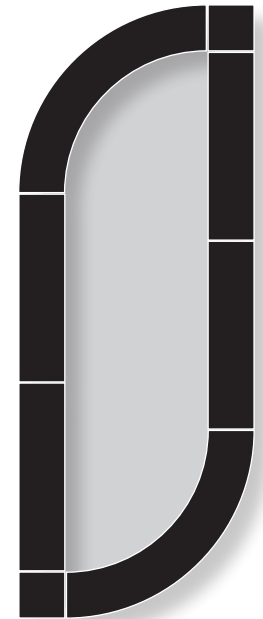






A261


STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	4

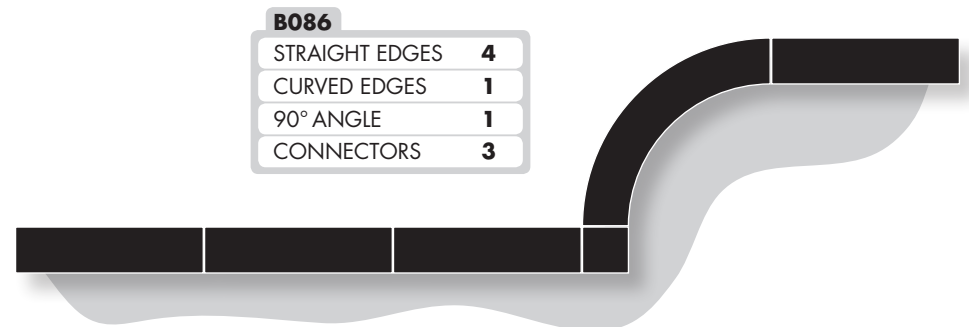

B086


STRAIGHT EDGES	4
CURVED EDGES	1
90° ANGLE	1
CONNECTORS	3

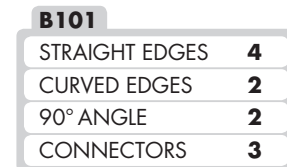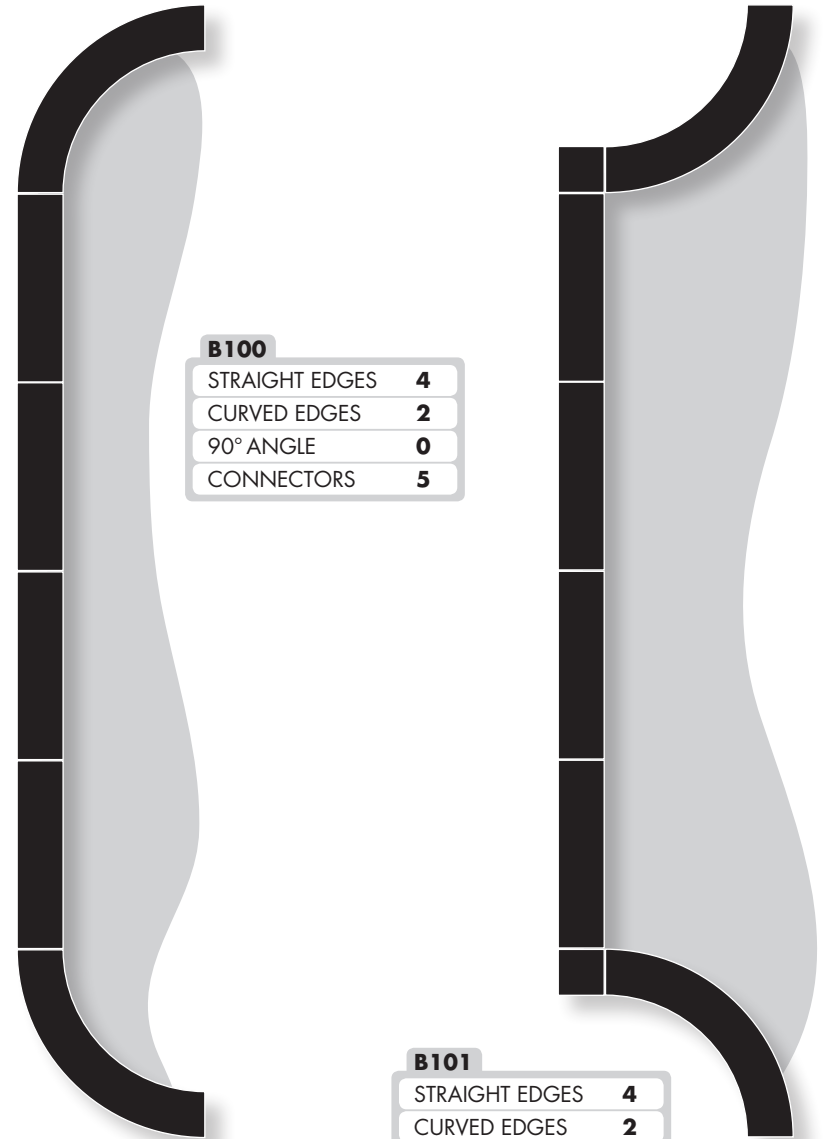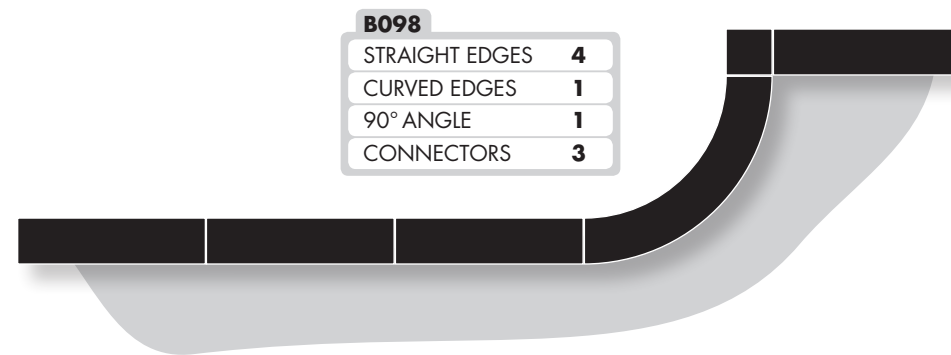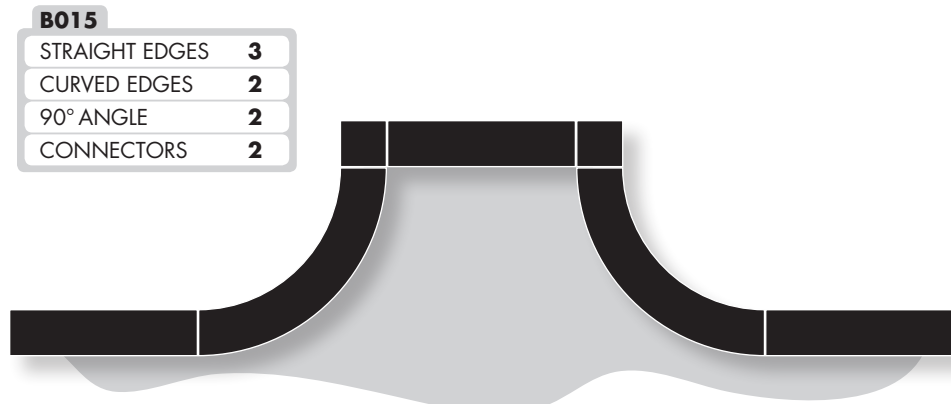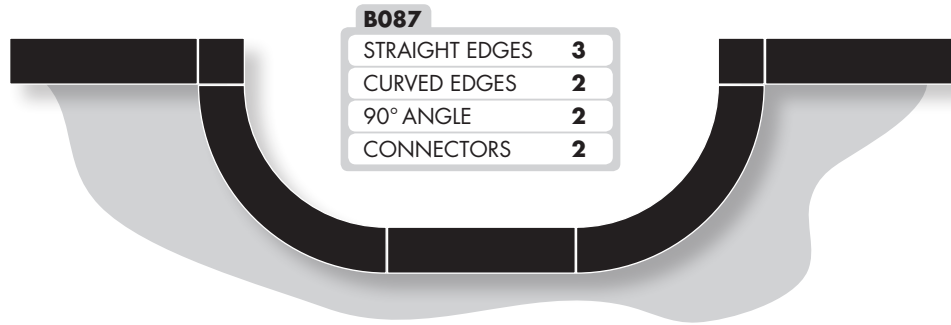

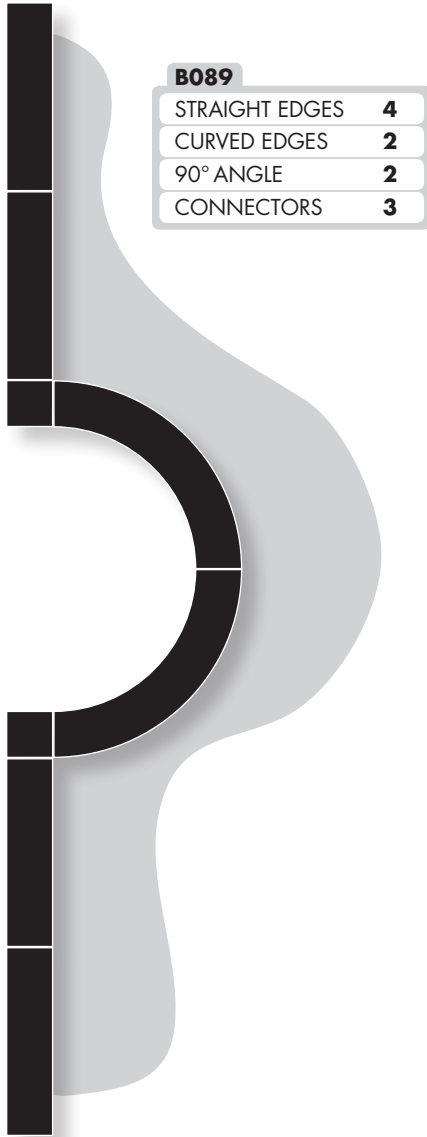


B089

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	3

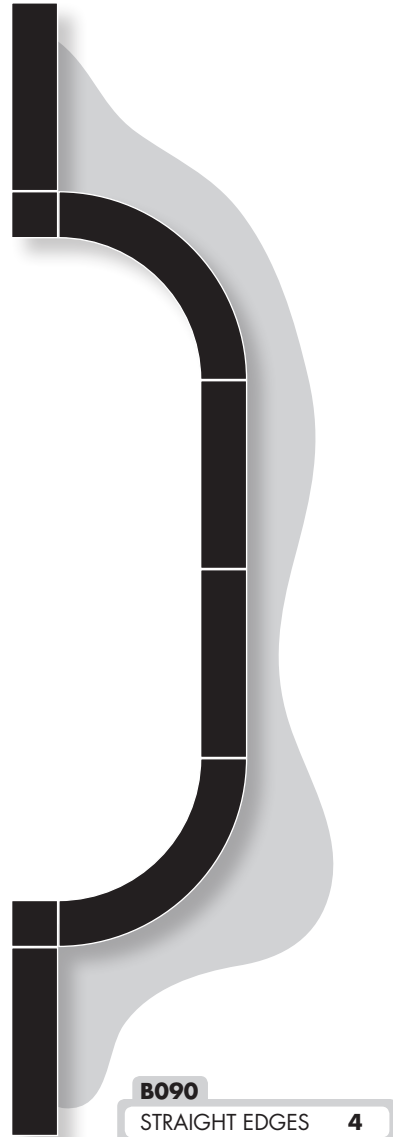


B090

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	3

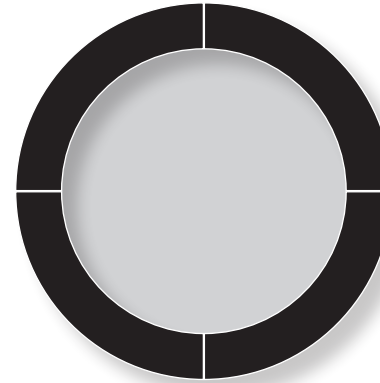


A003

STRAIGHT EDGES	0
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	4

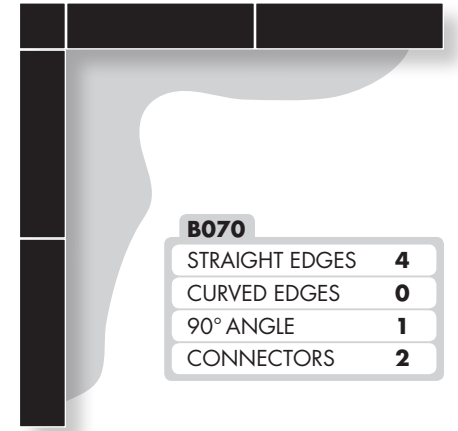


B070

STRAIGHT EDGES	4
CURVED EDGES	0
90° ANGLE	1
CONNECTORS	2

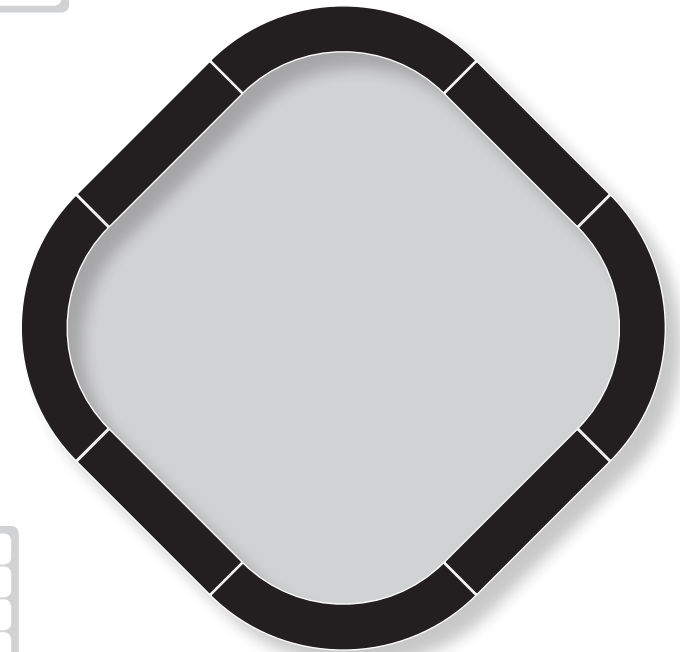


A194

STRAIGHT EDGES	4
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	8

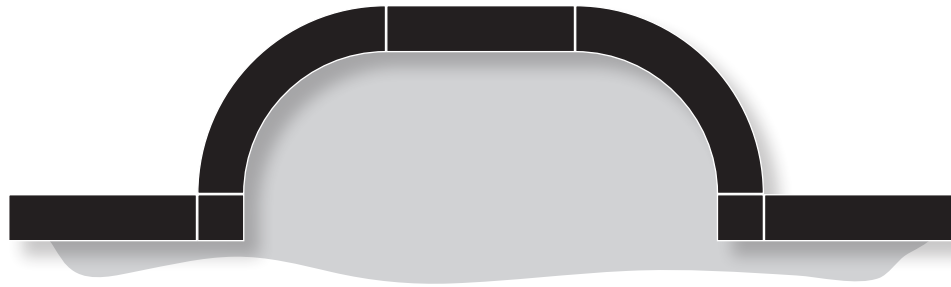


B099

STRAIGHT EDGES	3
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	2

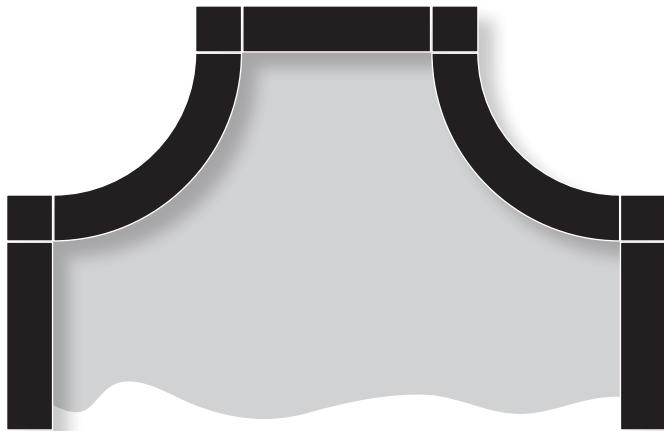

B102

STRAIGHT EDGES	3
CURVED EDGES	2
90° ANGLE	4
CONNECTORS	0

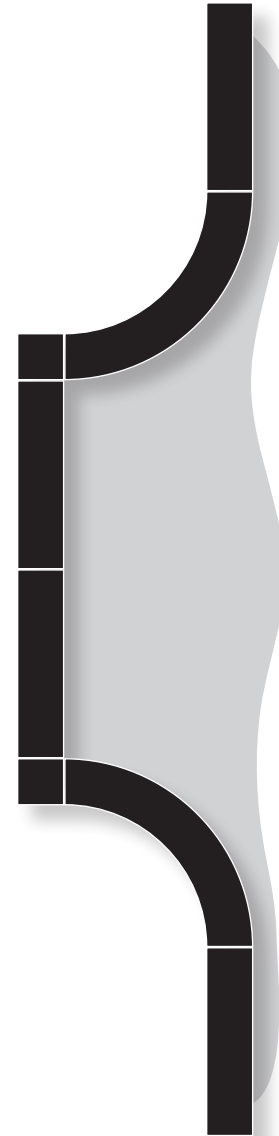

B091

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	3



B008

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	6
CONNECTORS	0



B104

STRAIGHT EDGES	2
CURVED EDGES	4
90° ANGLE	4
CONNECTORS	3




B092

STRAIGHT EDGES	2
CURVED EDGES	4
90° ANGLE	4
CONNECTORS	2



B012

STRAIGHT EDGES	0
CURVED EDGES	4
90° ANGLE	3
CONNECTORS	0

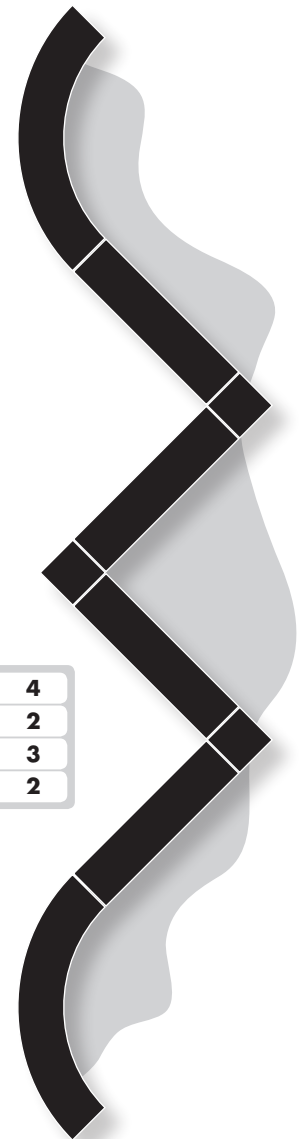


B107

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	3
CONNECTORS	2




B025

STRAIGHT EDGES	0
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	3

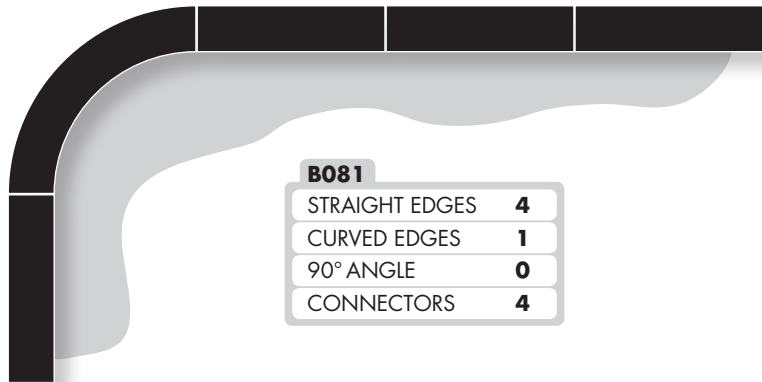


B081

STRAIGHT EDGES	4
CURVED EDGES	1
90° ANGLE	0
CONNECTORS	4

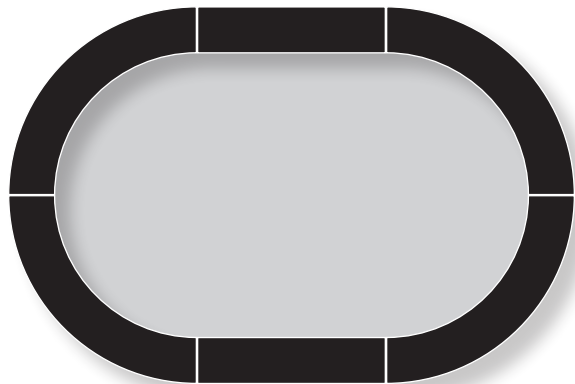

A050

STRAIGHT EDGES	2
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	6

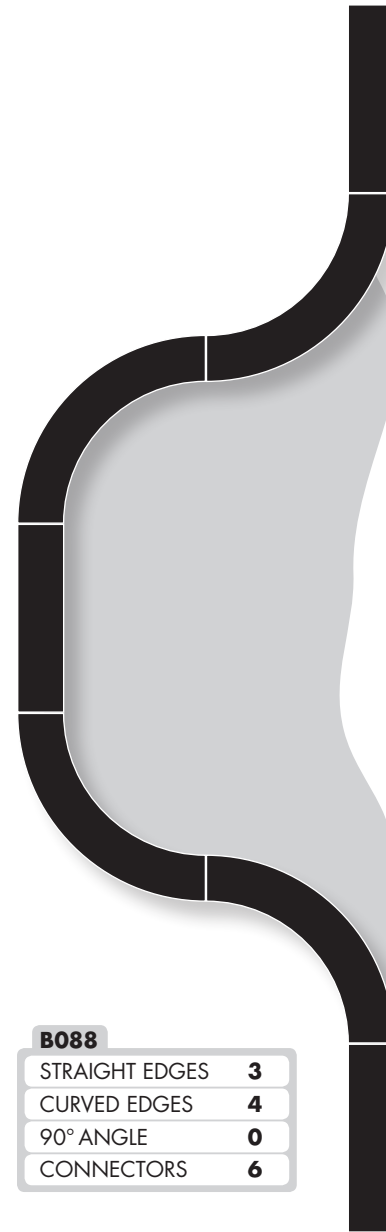

B088

STRAIGHT EDGES	3
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	6




A002

STRAIGHT EDGES	4
CURVED EDGES	0
90° ANGLE	4
CONNECTORS	0



B097

STRAIGHT EDGES	2
CURVED EDGES	1
90° ANGLE	0
CONNECTORS	2

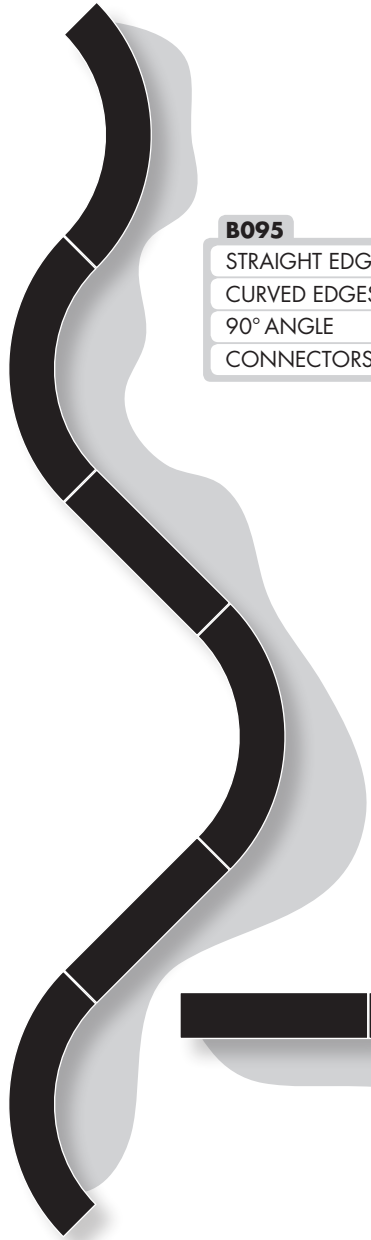


B095

STRAIGHT EDGES	2
CURVED EDGES	4
90° ANGLE	0
CONNECTORS	5




A280

STRAIGHT EDGES	0
CURVED EDGES	4
90° ANGLE	4
CONNECTORS	0

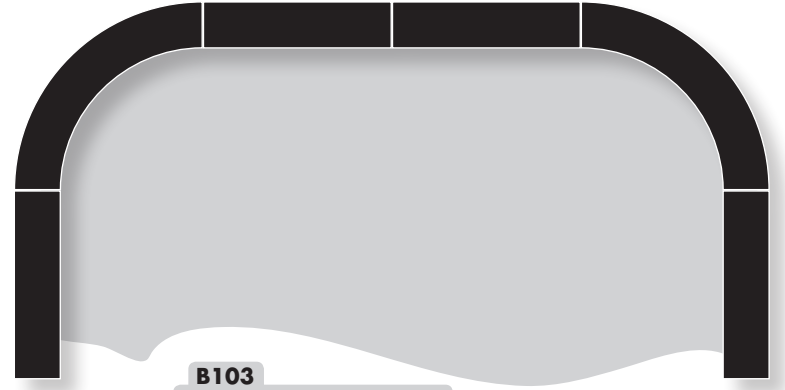

B103

STRAIGHT EDGES	4
CURVED EDGES	2
90° ANGLE	0
CONNECTORS	5

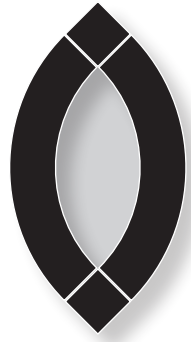

A019

STRAIGHT EDGES	0
CURVED EDGES	2
90° ANGLE	2
CONNECTORS	0



B096

STRAIGHT EDGES	2
CURVED EDGES	3
90° ANGLE	0
CONNECTORS	4



B071

STRAIGHT EDGES	4
CURVED EDGES	0
90° ANGLE	0
CONNECTORS	3



B106

STRAIGHT EDGES	4
CURVED EDGES	0
90° ANGLE	3
CONNECTORS	0